

2D Desktop Barcode Scanner User Manual



3 1 9 0 0 5 0 3 1 4

V:2208

Restore Factory Default Setting

Scan below QR setting code, the scanner will be restored to factory default setting.



Restore Factory Default Setting

Default Configuration: Interface: USB
Operating way: Auto Trigger
Ending character: Enter

Reading Version Information

Scan below QR code to get version information of this scanner.



Version Info.

Interface Configuration

USB Interface

When you want to connect the scanner with devices by USB cable, you could scan below QR code to configure the scanner for standard keyboard mode



*USB

USB COM(Virtual COM)

When you want to connect the scanner with devices by USB cable, you could scan below QR code to configure the scanner for virtual COM output mode(It will need driver, please contact your supplier to make the driver installation)



Virtual COM

①

②

COM(RS-232)

When you want to connect the scanner with device by RS-232 interface, you need to match the same configuration between the scanner and device, default COM interface configuration: 115200 Baud rate, 8 bit data, No check bit, 1 stop bit.



RS-232

Data Bits



7



*8

Stop Bits



*1



2

Check Digits



*None



ODD



Even

Language Settings



* English (US)



English (UK)



French



Italian



German



Spanish

④

⑤

Language Settings



Hungary



Portugal



Sweden



Latin America



Slovakia



Russia

⑥

Virtual Keyboard Setting

Under Virtual keyboard circumstance, the device could output correct information even by any language keyboard mode. When use virtual keyboard, please be sure the small numbers keyboard is working(Default is standard)



*Standard Keyboard



Virtual Keyboard

Bar Code Types Reading Ability Configuration

Scan below QR code to allow or forbid reading certain type of barcode. But in this situation (Read all 1D/2D barcode), the speed of decoding may slow down. It is better to choose the code types that you need to improve the decoding speed



Read all 1D Barcode



Disallow reading 1D barcode



Read all 2D Barcode



Disallow reading 2D barcode

⑦

Reading Reverse Image Barcode



Enable



*Disable

Codabar



Enable Codabar



*Disable Codabar

Codabar Start/Stop CHARS



*Enable Transmit Codabar Start/Stop CHARS



Disable Transmit Codabar Start/Stop CHARS

⑧

