

# Cash Drawer User Guide

## I . Technical Specifications

### Electrical Specifications:

1. Magnetic Coil Input Signal:

Pulse Amplitude: 12V DC; 24V DC      Pulse Width: 80ms~200ms



Pulse Duty Factor: 10%(max)      Peak Current:  $\leq 1.85A$

## II . Installation

1. Take out the Cash Drawer from Packing Box
2. Take out the key from Plastic Bag
3. Put the Box in a position as level as possible. (If the Back level is higher than Front, due to gravity, the box is easy to be damaged as larger Pop-up Power; If the Front level is higher than Back, the gravity will cause the Pop-up blocked, which impact the operational efficiency.)
4. Connect the Box Cable Plug with the corresponding interface of Mainboard or Printer.

## III. Lock Operation

The Cash Drawer with Three Positions, as shown in the following pictures:

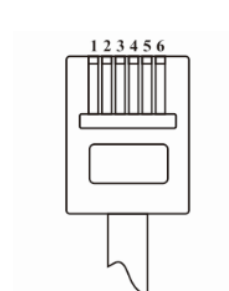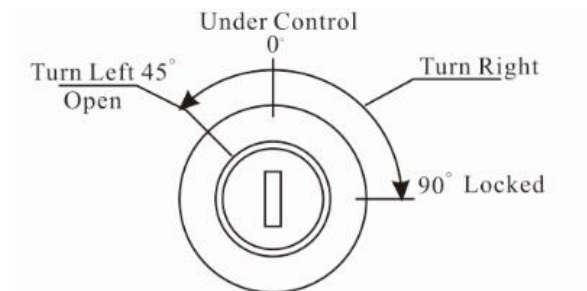

Lock Status: Open with the key only, electric or manual without key cannot work

Open Status: When Drawer kept in Open Status, Closing is not allowed.

Under Control Status: Opening controlled by connected mainboard or Printer.

Pin	Define
2 、 4	Cash Box-drive Pulse

## IV. Packing List

Cash Drawer: One Set  
Instruction: One Page

Key: 2 Pieces  
Interface Cable: One Cable